ZSLFM-I

INSTALLATION,
MAINTENANCE & SERVICE

STEP & IN GROUND | ZSLFM Series
4W (135lm) | 120V–277V | HK LED

IP65

Materials
6061-T6 Machined aluminum
316 stainless steel hardware

Fitting
2X 1/2" Conduit female

Dimming
Non dimmable

Installation and Adjustment

TURN OFF POWER BEFORE AND DURING WIRING TO POWER SUPPLY
Installation/Service must be done by a qualified electrician, and compliant with NEC and Local Codes.
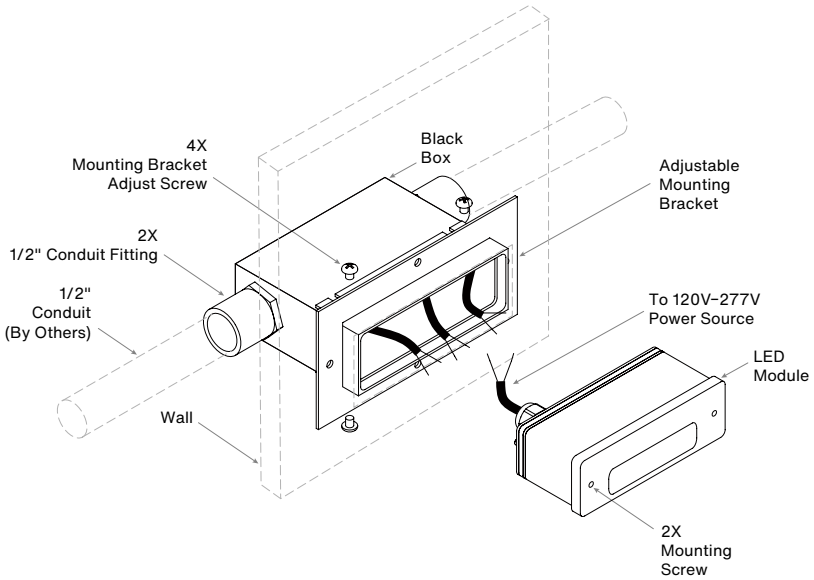
1. Loosen 2X mounting screws and pull LED module out with 7/64" hex drive key.
2. Loosen the 4X screws on the mounting bracket, attach the bracket to the supporting structure (e.g., 2X4 lumber), and adjust the position of the back box so that the front of back box is flush with the surface of the wall. Tighten 4X adjusting screws once in position.
3. Bring the power lines into the back box through one or two of 1/2" conduit fitting on both sides of the box.
4. Connect the wires from LED module to the 120V–277V power line.
5. Set the LED module back and tighten 2X mounting screws.